

SÔLT

Heat Pump Dryer 7.0kg Capacity Quick Start Guide

Tips for Using & Operating Your Heat Pump Dryer Model: GGSHPD70





Heat Pump Dryer 7.0kg Capacity Getting Started...

Please follow these steps before using the dryer

- Check the lint filters are clean and the water tank is empty before every load.
 Ensure both are replaced correctly before using your dryer.
- Sort and load items into the dryer drum, ensuring no items are in the way of the door.
 Close the door (you will hear it click shut).

Moving the Dryer

If the dryer needs to be placed at an angle for moving, only angle towards the right hand side (when viewed from the front). If the dryer has not been transported as described, leave it standing upright for at least one hour before turning on.

Operating the Dryer

- 1 Press 'On/Off' to activate your dryer.
- 2 Select your desired drying cycle by turning the Program Selection Dial.
- 3 Select your preferred drying options, using the buttons on the right hand side of the panel (if you wish to select options different from the default options for the cycle).
- 4 Touch the 'Start/Pause' button to start the cycle.

Selecting the Program

- 1 Press the On/Off button. The LED display will switch on to indicate the dryer is on.
- 2 Rotate the drying program knob to select your desired drying program.
- 3 As additional options, you can select Delay, or Anti-crease functions.
- 4 To begin drying using your selected settings, press the Start/Pause button. The dryer door will lock and begin the selected program.

Anti-Crease Function

This function helps to minimise creasing of your laundry items. The Anti-Crease LED shall light when the function is selected. At the end of the drying cycle, the default anti-crease operation time is 30 minutes but 120 minutes can be selected. The clothing can be removed during the anti-crease phase and all other drying programs (excluding: Cool, Refresh, Warm 30' and Warm 60').