




SOLT

60cm Canopy Rangehood Quick Start Guide

Tips for Using & Operating Your 60cm Canopy Rangehood
Model: GGSRC600S

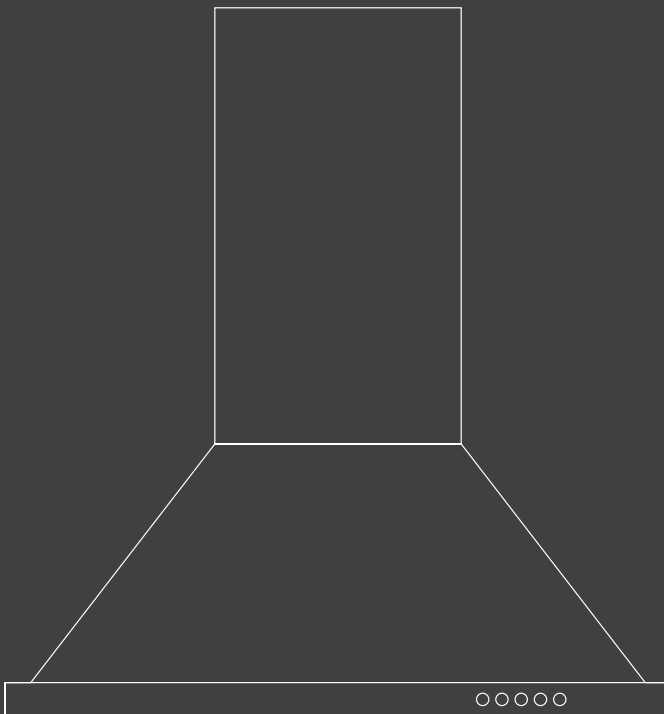


60cm Canopy Rangehood

Getting Started...

The Controls

- Power**
Press this button to turn off the rangehood fan.
- Low Speed**
Press this button to set the extraction at the lowest speed. It is suitable for simmering and cooking without much steam.
- Medium Speed**
Press this button to set the extraction to a medium speed. It is suitable for regular cooking.
- High Speed**
Press this button to set the extraction to the highest speed. Use this fan setting for heavy smoke or steam to achieve the maximum exhaust efficiency.
- Light**
Press this button to turn the built-in lamp on and off.

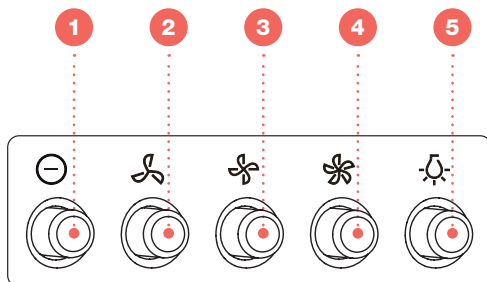

Installation

Before installing your new Canopy Rangehood, please ensure you first read all of the safety instructions contained in the provided user manual.

The typical installation method for your rangehood is for it to be wall-mounted. Please refer to the dimensions of your rangehood shown in the diagram below.

For safety and performance of your rangehood, adhere to the minimum and maximum distances from the rangehood base to the cooktop surface when positioning the rangehood for installation.

For a complete installation guide, refer to the user manual pages, 08–10.

