



52cm Undermount RangehoodQuick Start Guide

Tips for Using & Operating Your 52cm Undermount RangehoodModel: GGSRUM520B





52cm Undermount Rangehood Getting Started...

The Controls

- 1. Power Off
- 2. Decrease Speed
- 3. Digital Display
 - 1 = Lowest Fan Extraction
 - 2 = Medium Fan Extraction
 - 3 = Highest Fan Extraction
- 4. Increase Speed
- 5. Light
- 6. Delayed Power Off
- 7. Gesture Control Sensors

For a complete guide on operating your rangehood, refer to the user manual, page 07.

Installation

Before installing your new Undermount Rangehood, please ensure you first read all of the safety instructions contained in the provided user manual.

The typical installation method for your rangehood is into a purpose built cupboard. Refer to the dimensions of your rangehood shown in the diagram below.

For safety and performance of your rangehood, adhere to the minimum and maximum distances from the rangehood base to the cooktop surface when positioning the rangehood for installation.

For a complete installation guide, refer to the user manual pages, 08–11.



