




60cm Slide-out Rangehood Quick Start Guide

Tips for Using & Operating Your 60cm Slide-out Rangehood Model: GGSSL600S

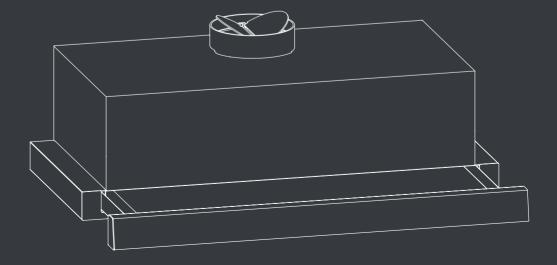

MODEL GGSSL600S

SÔLT

60cm Slide-out Rangehood Getting Started...

The Controls

1. Off

This setting will turn the rangehood fan off.

2. Low Speed

This setting adjusts the extraction to the lowest speed. It is suitable for regular cooking, including simmering and cooking without much steam.

3. High Speed

Light Operation

Off

On

This setting adjustes the extraction to the highest speed. Use this fan setting for heavy smoke or steam to achieve the maximum exhaust efficiency.

4. Light

Press this switch to turn the built-in lamp on and off.

Motor Operation

= Low Speed

= High Speed

= Off

Installation & First Use


Before installing your new Slide-out Rangehood, please ensure you first read all of the safety instructions contained in the provided user manual.

The typical installation method for your rangehood is into a purpose built cupboard or by wall mounting.

Please refer to the dimensions of your rangehood shown in the diagram below.

When positioning the rangehood for installation and use, we advise that the rangehood is mounted at a height of at minimum 650mm above your cooktop for safety and performance reasons.

For a complete installation guide, refer to user manual pages 08–12.

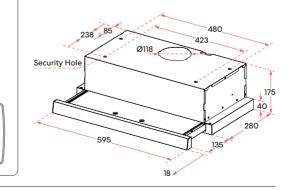

For more information please call 1300 11 43 57